

LM2700 Service Intervals

- Inspect, Adjust, Clean
- Replace (first time only)
- ▲ Replace

Maintenance Item	Before Work	After Work	Every 10 hrs	Every 50 hrs	Every 100 hrs	Every 200 hrs	Every 400 hrs	Every 500 hrs	Every 800 hrs	Every 1500 hrs	Every 3000 hrs	Every year	Every 2 years	Every 4 years	When Required
Check Engine Oil Level	○														
Check Fuel Level	○														
Check Coolant Level	○														
Clean Radiator	○														
Clean Oil Cooler	○														
Clean Engine Area	○														
Check Hydraulic Oil Level	○														
Check Tyre Pressures & Condition	○														
Check Blade Condition	○														
Component Security (nuts, bolts, hoses etc)	○														
Check Interlock System Safe Function	○														
Check For Oil Leaks	○														
Check Brakes Function	○														
Check Condition of all Safety Covers	○														
Check Air Filter Condition	○														
Clean Machine Exterior		○													
Grease Groomer Gearbox (if fitted)			○												
Open Air Cleaner Evacuator Valve			○												
Check Fuel Hose Condition				○											
Grease & Lubricate all moving parts				○											
Check Rear Roller Brush Condition				○											
Check & Adjust Brakes				○											
Lubricate & Adjust Control Cables				○											
Grease Rear Unit Swing Out Pins				○											
Backlap Blades				○											Every 50 hours or as and when required
Check Battery Fluid Level					○										
Check Fuel Hose Clamps Security					○										
Replace Hydraulic Oil					●			▲							500 hours or annually, whichever comes first
Replace Hydraulic Oil Filter					●			▲							500 hours or annually, whichever comes first
Check Fan Belt Tension					○										
Clean or Replace Air Filter				○		●					●				200 hours or 1 year, whichever comes first
Replace Engine Oil				●		▲									50 hour first change, every 200 hours thereafter
Replace Engine Oil Filter				●		▲									50 hour first change, every 200 hours thereafter
Check Radiator Hose Condition					○										
Grease Reel Motor Shafts					○										
Check condition of Air Intake Line					○										
Replace Fuel Filter							▲								every 400 hours or annually, which ever comes first
Remove Sediment From Fuel Tank								○							
Grease Cutting Reel Pivot Pins								○							
Replace Hydraulic Suction Filter								▲							500 hours or annually, whichever comes first
Flush the Radiator & Cooling System								○							
Replace Fan Belt								▲							
Adjust Engine Valve Clearances									○						
Check the condition of electrical wiring												○			
Replace Coolant & Anti Freeze													▲		
Replacement of Fuel Pipes & Clamps													▲		
Replacement of Radiator Hoses & Clamps													▲		
Replacement of air intake hose													▲		
Replace Hydraulic Hoses (Moving Part)													▲		
Replace Hydraulic Hoses (Fixed Part)														▲	
Replace Battery															▲
Replace Brake Pads															○ Replace Brake Pads as and when required
Replace Brake Cables															▲
Regrind Blades															○ Regrind/Replace blades as and when required
Check Fuel Injection Nozzle Pressures										○					
Injection Pump Service											○				