

SP05A Service Intervals

- Inspect, Adjust, Clean
- Replace (first time only)
- ▲ Replace

Maintenance Item	Before Work	After Work	Every Week	Every 5 hours	Every 50 hrs	Every 100 hrs	Every 250 hrs	Every 400 hrs	Every 500 hrs	Every year	Every 2 years	Every 4 years	When Required
Check Engine Oil Level	○												
Check Fuel Level	○												
Clean Engine & Muffler Area	○												
Check Tyre Pressures & Condition	○												
Component Security (nuts, bolts, hoses etc)	○												
Check Interlock System Safe Function	○												
Check For Oil & Fuel Leaks	○												
Check Brakes Function	○												
Check Air Filter Condition	○												
Check Condition of all Safety Guards	○												
Clean Machine Exterior		○											
Open Air Filter Evacuator Valve			○										
Grease all Grease Points					○								
Grease 2WD/3WD selection lever base					○								
Check Fuel Hose Condition					○								
Clean & Lubricate Steering Chain					○								
Lubricate & Adjust Control Cables					○								
Check transmission belt tension and condition					○								▲
Change Engine Oil				●		▲							5 hour first change, every 100 hours thereafter or annually, whichever comes first
Change Engine Oil Filter					▲								
Change Hydraulic Oil & Filter					●			▲					First change 100 hours, thereafter every 500 hours or annually whichever comes first
Check Battery Fluid					○								
Clean or Replace Air Filter					○		▲						Replace every 400 hours, annually or after 6 cleanings, whichever comes first
Check Muffler & Spark Arrester					○								Check every 100 hours or annually, whichever comes first
Clean and Adjust/Replace Spark Plug					▲								Replace every 100 hours or annually, whichever comes first
Adjust Engine Valve Clearances						○							
Check Condition & Adjustment of Brakes							○						
Replace Fuel Filter								▲					Replace every 400 hours or annually, whichever comes first
Clean Air Cooling System							▲						Clean every 400 hours or annually, whichever comes first
Clean Oil Cooler							○						Clean every 400 hours or annually, whichever comes first
Remove Sediment From Fuel Tank									○				
Check the condition of electrical wiring									○				
Replace Fuel Filter									▲				
Replacement of Fuel Pipes & Clamps										▲			
Hydraulic Hoses (moving parts)										▲			
Hydraulic Hoses (fixed parts)											▲		
Replace Battery													▲
Replace Control Cables													▲
Drain Fuel													○ Drain all fuel if the machines is to be unused for more than 2 months