

TDA1200 & TDA1600 Service Intervals

- Inspect, Adjust, Clean
- Replace (first time only)
- ▲ Replace

Maintenance Item	Before Work	After Work	Every 10 hours	Every 20 hours	Every 50 hrs	Every 100 hrs	Every 200 hrs	Every 300 hrs	Every 500 hrs	Every 800 hrs	Every 1500 hrs	Every 3000 hrs	Every year	Every 2 years	Every 4 years	When Required
Component Security (nuts, bolts, hoses etc)	○															
Check For Oil Leaks	○															
Check Condition of all Safety Guards & Chains	○															
Check Condition & Security of all Tines	○															
Clean Machine Exterior		○														
Change Gearbox Oil						●		▲								
Grease all Grease Points					○											
Lubricate Gearbox Change Lever Linkage					○											
Grease Height Adjuster Threaded Bar					○											
Lubricate Height Locking Lever Threads					○											
Clean Tine Location Sockets & Grease					○											Remove tines when the machine is not in use
Lubricate PTO shaft and Splines					○											
Check Spring lengths and Condition													○			
Inspect Condition & Security of Lift Linkage													○			