

LM311--1730Z0 Valve Complete HF164202-20

1	Proportional Solenoid Relief Valve (Reel Rotation On/Off)	YZTS10-26A-0-N
9	Coil for valve 1 above	40041631
2	Solenoid Switching Valve (Cutting Units Up/Down Control)	YZSV1058D0N00
9	Coil for valve 2 above	YZ4303712
	Seal Kit for valve 2 above	40078945
	Coil Nut for valve 2 above	4540560
3	Solenoid Switching Valve (Unload Valve - opens when engine torque low)	YZSV1021P0N00
9	Coil for Valve 3 above	40041631
	Seal Kit for valve 3 above	40108598
	Coil Nut for valve 3 above	7004400
4	Relief Valve (main Relief Pressure)	RV10-22A-0-N-35/M173
	Seak Kit for valve 4 above	40078945
	Coil Nut for valve 4 above	7004420
5	Pilot Operated Check Valve	PC08-30-0-N-25
	Seal Kit for valve 5 above	40078945
6	Orifice Plug	6112118
	Seal Kit for 6 above	40108448
7	Plaque	6103004
10	Solenoid Switching Valve (forward and Lap rotation direction change)	YZHSV1047D0U00
9	Coil for valve 10 above	40041631
12	Flow Control Valve	FR10-39E-0-N
11	Locking plate kit for 12 above	5965000.1000A
	Seal Kit for Valve 12 above	40108419
	Valve Nut for 12 above	4553800
13	Flow Control Valve	FR10-30F-)N-/M6.0
	Seal Kit for Valve 13 above	40108449
14	Flow Control Valve	FC10-21A-0-N-05
	Seal Kit for Valve 14 above	40108563
15	Pressure Compensation Valve	EC10-42-0-N-80
	Seal Kit for Valve 15 above	40088759
16	Relief Valve (Cutting Unit Lift/Lower pressure relief)	CR08-38A-O-N-10/M50
	Seal Kit for Valve 16 above	12A1:C29A2:C29A1A1:C29

ブロック内部に装着されます。

